


Plug this connector onto the stator terminal of the alternator

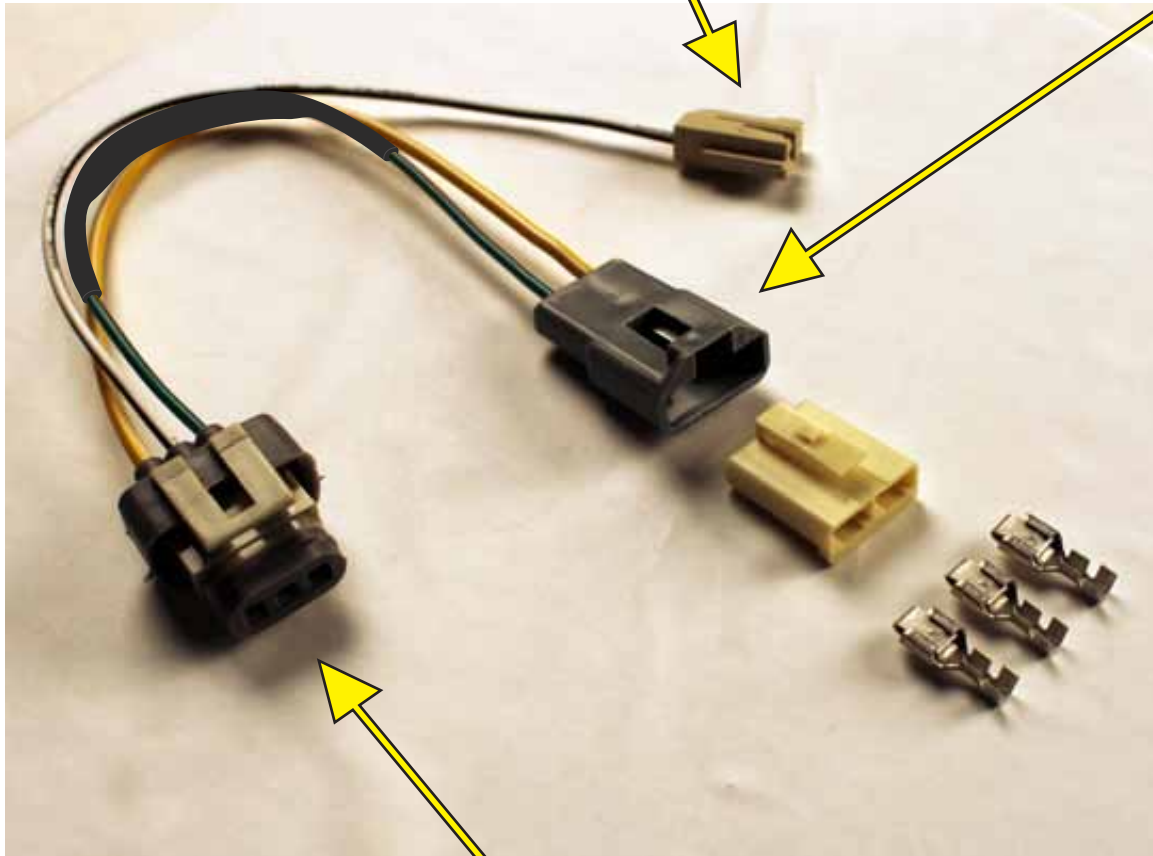

Plug this connector onto the main plug connection of the alternator.

If you have an AAW harness that is already set up for an "SI" internally regulated alternator, simply plug the alternator connector with the red and brown wires directly into this connection. If you do not have an AAW harness, use the white plug-in connector and terminals that are included with this kit to make your connections. Connect a 12v battery source (hot all the time) to the AAW yellow wire, and a 12v switched wire (only hot when the key is turned to "on" or "accessory") to the AAW green with red stripe wire.

