


TT630

66-67 Chevelle Gauge Conversion from Warning Lights to Gauges with Volt

These instructions will help you convert your warning light harness to work on your new gauges.

1. Disconnect Battery Cables
2. Use templates provided to cut holes in original backing plate to fit new gauges.
3. Fuel Gauge: Use the original plug from old fuel gauge and plug directly to the new fuel gauge.
4. Volt Gauge: Jumper wire installed ready for use.
5. Temperature Gauge: Cut Dark Green and Pink wires at the original warning light socket and attach eyelet terminal connectors provided. Pink wire goes to the "+" terminal on back of gauge. Dark Green wire to the "s" terminal on back of gauge. Cut Dark Green wire at the ignition switch plug or gauge will not function properly. Replace temperature sending unit on engine with new sending unit provided, reconnect Dark Green wire to sending unit.
6. Oil Gauge: Remove oil pressure switch on engine and replace with fittings and copper line provided, Run the copper line from fittings on engine through the firewall and connect to back of gauge. Tighten all fittings snugly and do not over tighten, if you over tighten the fittings at the gauge you may damage the gauge.

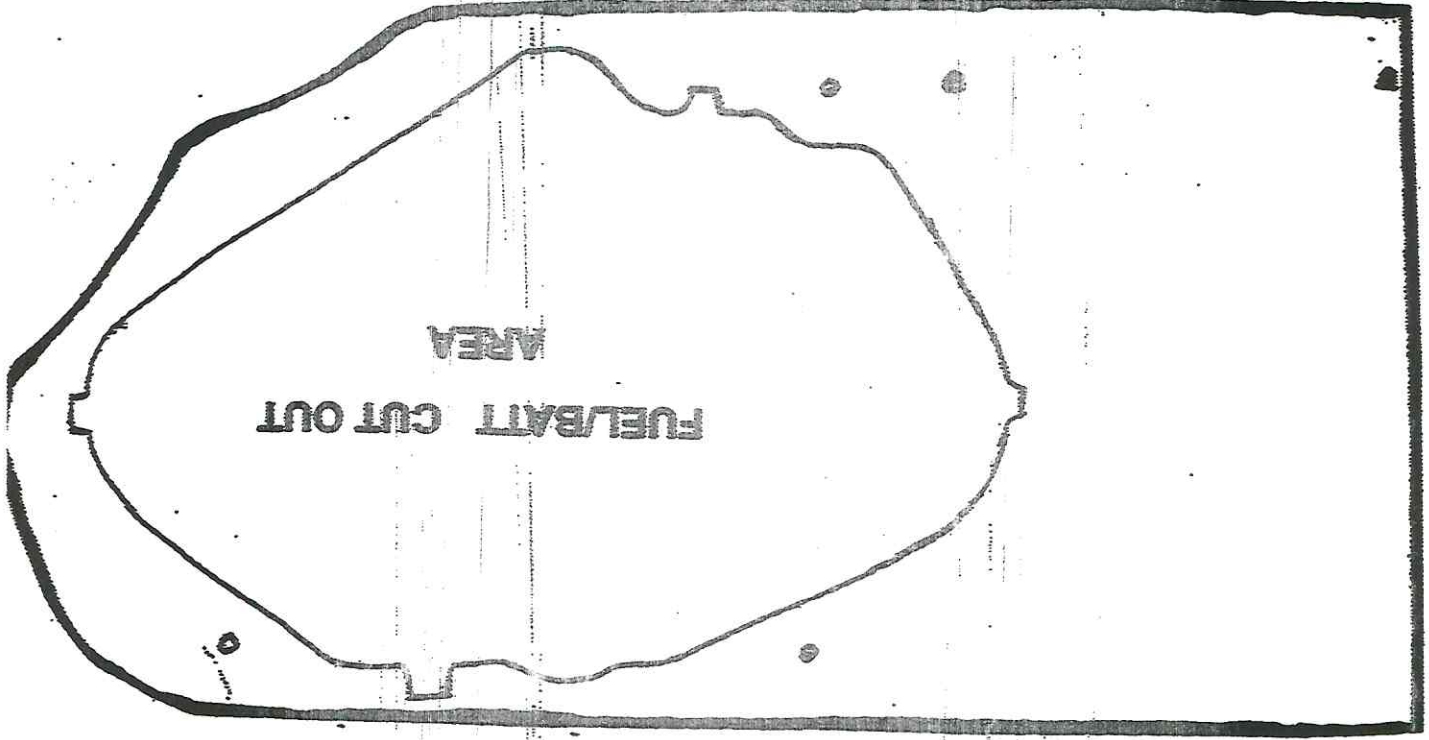

WARNING LIGHT TO GAUGES CUT OUT TEMPLATE

